




Work Instruction Optocoupler and BDI Ferrite



Remove the driver's seat. Remove the black bag and the lower plate from the driver's seat (both fastened with Velcro). Remove the fiber cover panels on the right side (remove screws). For assembly, do the reverse process.

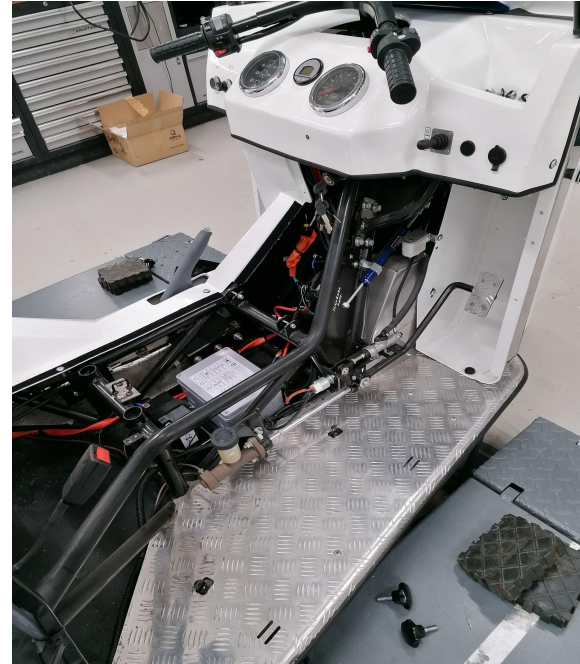




Clamp the ferrite filter (supplied by ETF) on all 4 wires together close to the back of the BDI.
Add a little tie-wrap behind the ferrite to keep it in place.

Apply the small white ferrite near the BDI as illustrated.



Check if your opto-coupler has '22K' on it

Take out - disconnect

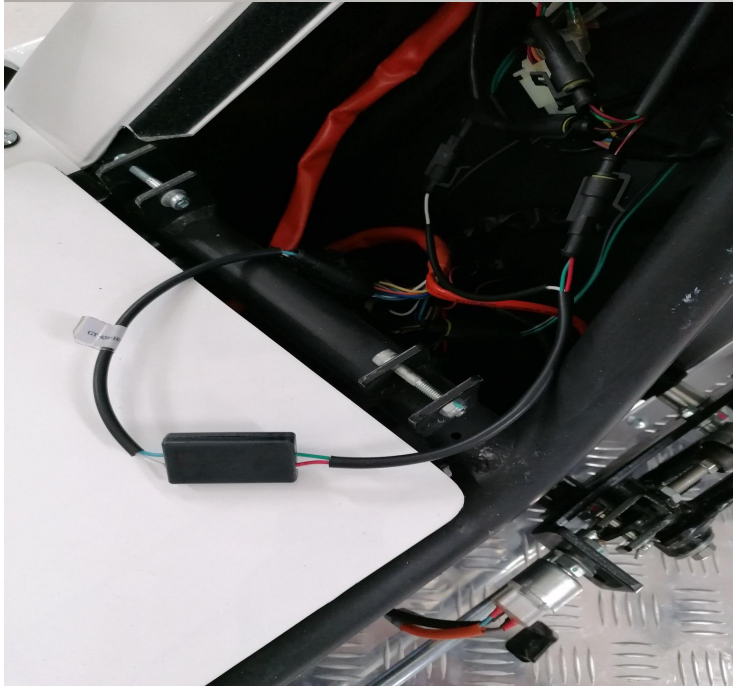

Add new model 'R4' (supplied by ETF) - install same positions as existing opto-coupler

Send old optocoupler to ETF by mail.